



EDFA18w High Power EDFA

(EYDFA)

Table of Contents

1. Safety Instructions	3
1.1 Electrical Safety	3
1.2 Laser Safety	3
2. General Information	4
2.1 Description	4
2.2 Specifications	5
2.3 Block Diagram	7
2.4 Front and Rear Panel	8
2.5 Ordering Information	9
3. Installation	10
3.1 Unpacking	10
3.2 Operating Environment	10
3.3 EDFA Mounting and Power Connection	10
3.4 Optical Connections	11
3.5 EDFA Connections	11
4. Touchscreen GUI Setting	12
4.1 Verification	12
4.2 Setup Menu	14
4.3 Network Configuration	17
4.4 About	19
5. Web GUI Setting	20
5.1 Accessing the Web interface	20
5.2 Management	21
5.3 Network	27
5.4 Security	29
5.5 Service	30
6. SNMP Management	32

WARNING:

EDFA18w high power EDFA, electric power supplied, is a generator of invisible laser radiation in the infrared and optical range, which can be dangerous to the eye and causes burn of the direct irradiation. Operation of the device requires that the personnel must completely understand and meets the required conditions of all laser safety & electrical safety.

1.1 Electrical Safety

EDFA18w operates from AC power source that supplies 90~132VAC / 176~264VAC or DC power source that supplies 36 to 72 VDC.



CAUTION:

EDFA18w must be well grounded in accordance with local and national electrical standards. Before supplying the power to the device, make sure the correct voltage is used. Failure to use the correct voltage could cause damage to the device.

Allow only personnel trained in electrical safety to operate this amplifier. Otherwise, injuries to personnel may occur.

1.2 Laser Safety

EDFA18w high power EDFA is class 4 laser safety according to the international classification that can burn the skin, or cause devastating and permanent eye damage as a result of direct, diffuse or indirect beam viewing. These lasers may ignite combustible materials, and thus may represent a fire risk. These hazards may also apply to indirect or non-specular reflections of the beam, even from apparently matte surfaces-meaning that great care must be taken to control the beam path.



CAUTION: Use appropriate laser safety eye-wear when operating this device.

DO not install or terminate fibers when amplifier is active.

DO not look directly at any fiber end. Always keep your eyes at least 30 cm away from any light-guiding fiber or device.

DO not view an activated fiber with optical instruments (e.g., magnifiers, microscopes)

DO not open the cover! Laser hazard might increase.

Keep in mind that merging multiple light signals will increase the hazard.

Allow only personnel trained in laser safety to operate this amplifier. Otherwise, injuries to personnel may occur.

2. General Information

2.1 Description

EDFAw18 high power EDFA is characterized by low noise and high linearity performance to meet the most demanding requirements of CATV and FTTx applications. It offers a flexible, low-cost solution for large area distribution networks.

Touch Screen LCD

EDFAw18 high power EDFA is the **First Unit** to embed touchscreen LCD in CATV industry.

Output Optical Power

EDFAw18 high power EDFA has standard series that is based on the optical power included 25~40dBm before splitter.

It is available to make special modifications to a specified output power up to **43dBm** before splitter.

This optical amplifier has built-in optical power splitter for providing up to 128 output ports. Standard is at 1, 2, 4, 8, 16, 32 or 64 output power port.

Control Modes

EDFAw18 can be configured in one of three optical output power control modes:

- APC (Automatic Power Control): Output Optical Power Level Stabilization
- ACC (Automatic Current Control): Pump Current Level Stabilization
- AGC (Automatic Gain Control): Optical Gain Level Stabilization

Measurement

EDFAw18 is equipped with standard measures of input and back reflection optical power and reflected power meter within 60 dB dynamic range. Measurement of reverse reflection is useful function to monitor networks and to configure optimal settings exploitation.

Optical Switch (Optional)

EDFAw18 can be equipped with automatic redundant input port according to customer request.

Optical power level at each of the two input ports is measured independently, allowing you to instantly switch from the primary input port to the backup input port when the power on signal.

WDM PON (Optional)

EDFAw18 can be equipped with PON port according to customer request for xPON networks.

Management

All Edfaw18 series optical amplifiers have a built-in Web server, which can be reviewed by any of the widely used web browser. Controlling and monitoring of the amplifier is used by the menu of interactive Web pages. On-demand monitoring of the amplifier can also be accessed by our SNMP Manager.

Mechanical

All EDFA's series amplifiers are in a standard 2U(1U and 3U), 19", equipped with 3 reliable cooling fans operating in parallel with microprocessor overheating protection. The Amplifier is capable of working with temperature up to 50°C, and, if necessary, up to 60°C is optional. Standard power operates on AC 90~132V or 176~264V with high efficiency and high reliability.

2.2 Specifications

Optical Characteristics		
Parameter	Unit	Value
Optical Input Wavelength	nm	1545 ~ 1565
Optical Input Power	dBm	-10~+10
Output Optical Power	dBm	Upto 40dBm
Typical Output Power	dBm	≥ 18
Output Power Stabilization Range	%	30 ~100
Port Numbers	--	1~256
Output Power Tolerance	dB	± 0.5
Port Uniformity	dB	± 0.7
Noise Figure ¹	dB	≤ 5.5
Optical Test Port	dB	-5~+5
Return Loss Input/Output	dB	≥ 45
Isolation Output ► Input	dB	≥ 40
Polarization Dependence	dB	≤ 0.3

1. Noise figure at 0 dBm input power, nominal output power and signal wavelength 1550 nm.

PON Characteristics (Optional)		
Parameter	Unit	Value
GPON Center Wavelengths	nm	1310/1490
XG(S)-PON Center Wavelengths (optional)	nm	1270 / 1577
GPON + XG(S)-PON Center Wavelengths (Optional)	nm	1270 /1310/1490/1577
Insertion Loss	dB	≤ 1
Isolation CATV ► PON	dB	30 @ 1545~1565 nm
Isolation COM ► PON	dB	15 @ 1545~1565 nm
Return Loss	dB	≥ 45


Optical Switch for 2 Inputs (Optional)		
Parameter	Unit	Value
Insertion Loss	dB	< 1
Crosstalk	dB	≤ -55
Repeatability	dB	± 0.05
Switch Time	ms	≤ 10
Return Loss	dB	≥ 50

General Characteristics		
Parameter	Unit	Value
Power Supply	pcs	2 (1 default, 1 optional)
Chassis Type	--	1U, 2U, 3U 19" Rack Mounted
AC Input Voltage	Vac	90~132 or 176~264
DC Input Voltage	Vdc	36~ 72
Power Consumption	W	≤75
Dimension (W x H x D)	mm	484*44*385 (1U)
	mm	484*88*336 or 484*88*416 (2U)
Operating Temperature Range	°C	-5~+50


Management Interface	
Parameter	Value
Data Link Layer	Ethernet 10/100 Base-T (and LLDP optional)
Network Layer	IPv4, ICMP
Transport Layer	UDP, TCP
Application Layer	SNMPv1/v2c, DHCP, Web
Connectors	10/100 Base-T
Front Panel Management	3.5" 480 x 320 Color Touch Screen LCD for 2U and 3U 2.4" 320 x 240 Color Touch Screen LCD for 1U

Control Mode	
Parameter	Value
Stabilization Mode	Pump Current
	Output Optical Power
	Optical Gain
Automatic Pump Shutdown Mode	Low Input Power (LOS)
	High Back Reflection
	Overheating


2.3 Block Diagram

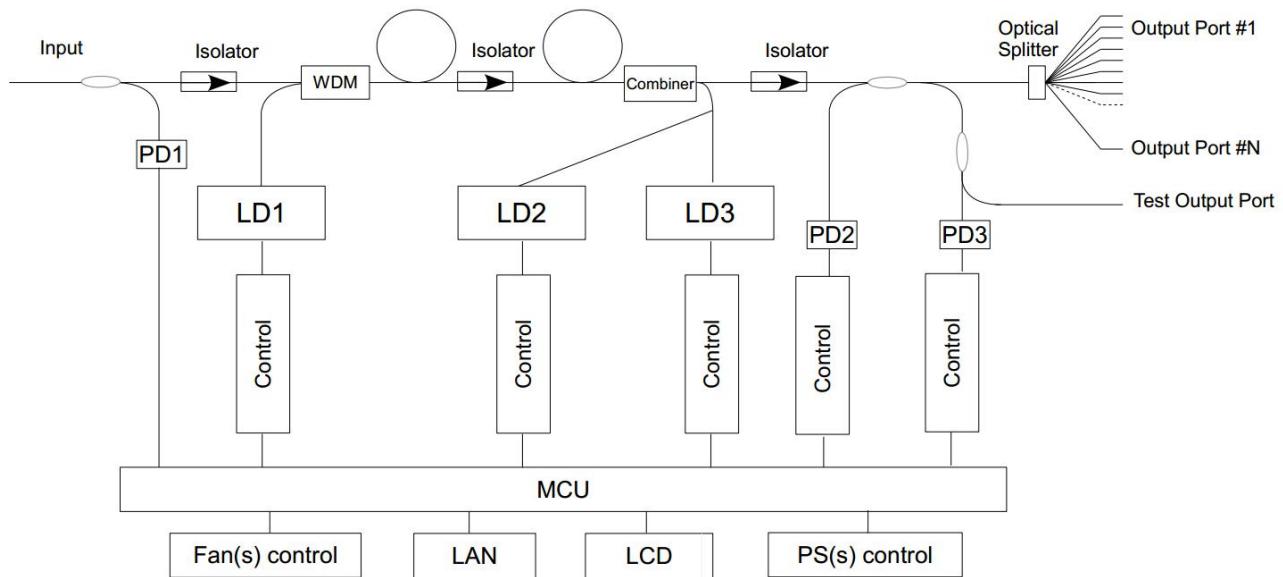




2 Inputs Optical Switch (Optional)

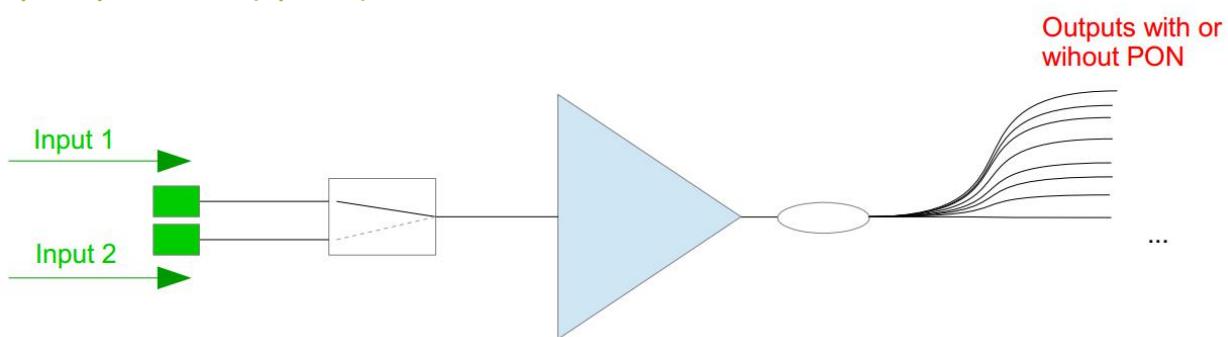



Standard WDM PON (Optional)

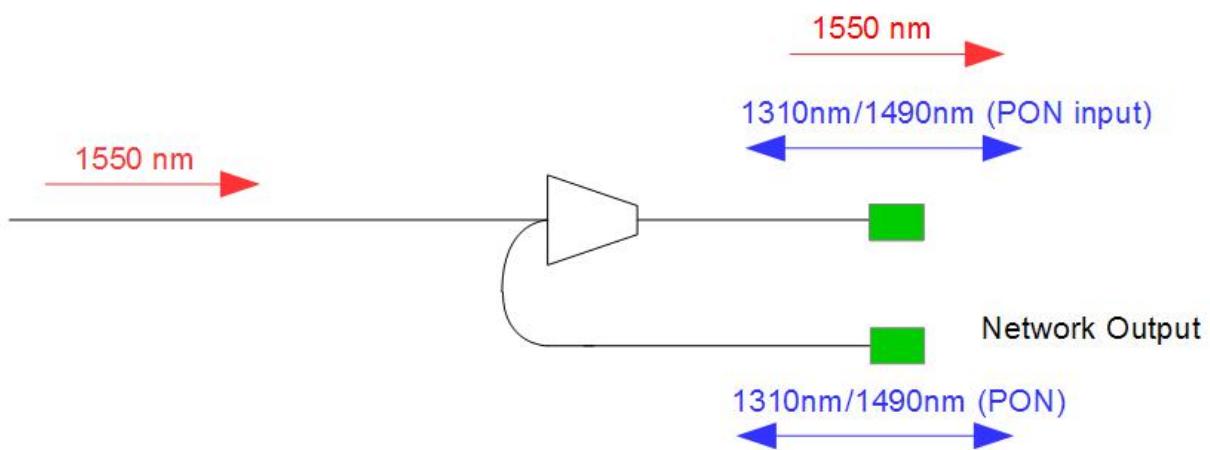

2.4 Front and Rear Panel
(2U, CATV, SC/APC)

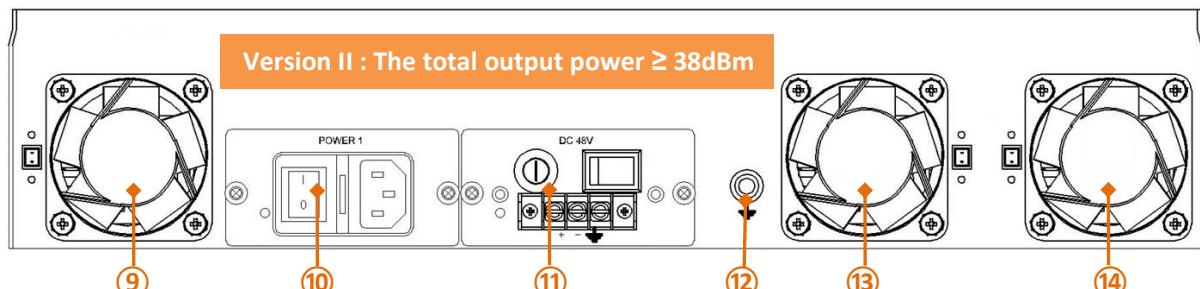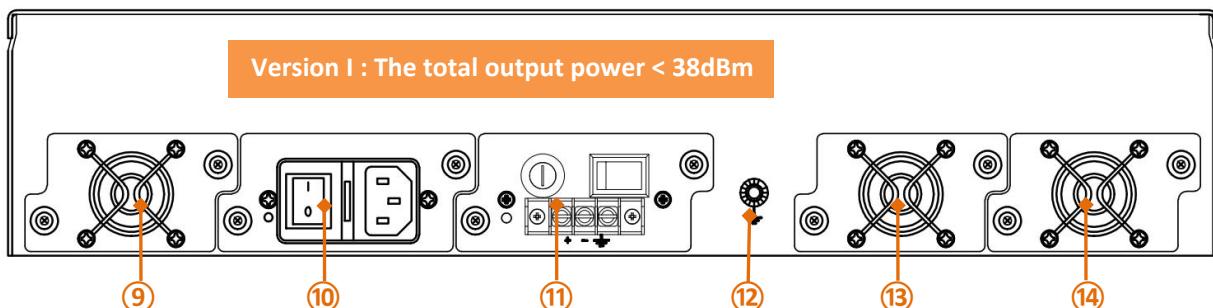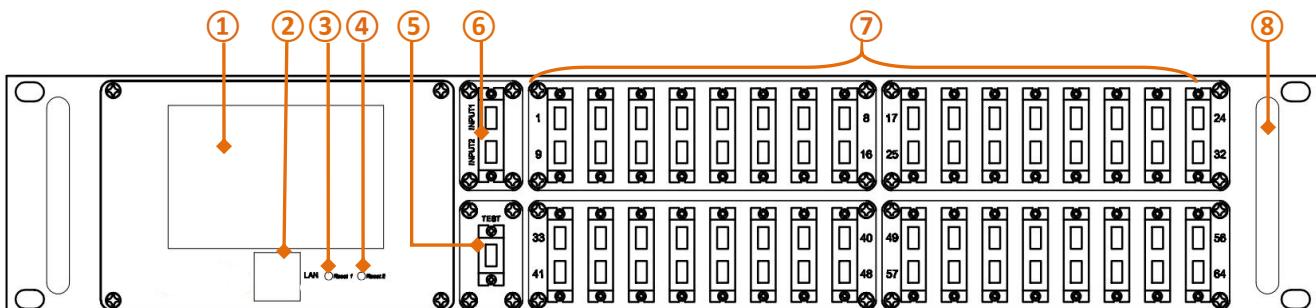

(1U, CATV, SC/APC, Optical Switch)

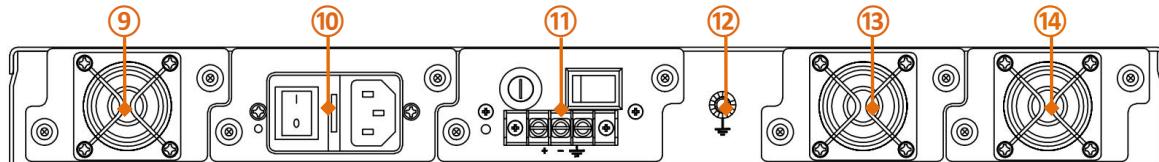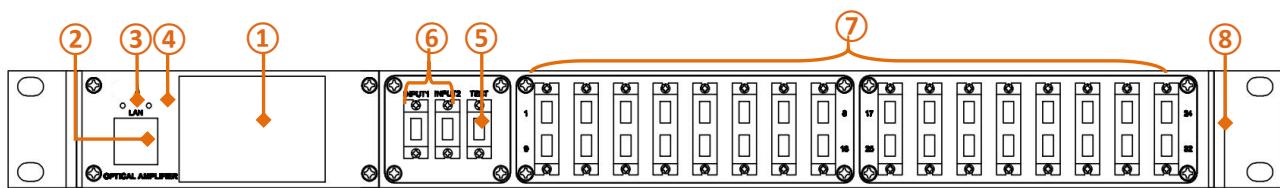

No.	Description	No.	Description
1	3.2"/2.4" Color Touchscreen LCD	8	Handle
2	RJ45 LAN Port for Management	9	Removable Fan
3	LCD Reset1	10	Hot Plug-gable Power 1:AC Input
4	System Reset2	11	Hot Plug-gable Power 2: DC Input
5	Optical Testing Port	12	Grounding Screw
6	Optical Input Port	13	Removable Fan
7	Optical Outputs or COM+PON Ports	14	Removable Fan

2.5 Ordering Information

PL2000H-①		-②		-③		-④		-⑤		-⑥		-⑦ Optional		-⑧ Optional		-⑨ Optional					
Output Ports		Output Power per Port		Chassis		Optical Connector		Power Supply		Power Cord		WDM PON		PON Optical Connector		Optical Switch					
2	2 Ports	15	15dBm	1U	1U 19"	SA	SC/APC	AA	Two AC input	CN	Chinese	PON	GPON EPON	SA	SC/APC	OSW	Enabled				
4	4 Ports	16	16dBm	2U	2U 19"	SU	SC/UPC	DA	One DC+One DC input	EU	Europe	10P	10GPON 10GEAPON	SU	SC/UPC						
8	8 Ports	17	17dBm	3U	3U 19"	LA	LC/APC	DD	Two DC Input	US	USA			LA	LC/APC						
16	16 Ports	18	18dBm			LU	LC/UPC	A	One AC Input	UK	British			LU	LC/UPC						
32	32 Ports	19	19dBm					D	One DC Input												
64	64 Ports	20	20dBm																		
128	128 Ports	21	21dBm																		
256	256 Ports	22	22dBm																		
		23	23dBm																		
		24	24dBm																		
		25	25dBm																		
		26	26dBm																		
		27	27dBm																		
		28	28dBm																		
																			

3. Installation

EDFAw18 high power EDFA Kit includes:

Item	Quantity	Item	Quantity
EDFAw18 Unit	1	Power Cable	1 or 2
User's Manual	1	Testing Report	1
Quick Guide	1	Packing Box	1

3.1 Unpacking



WARNING:

To avoid electrical shock, do not operate the unit if it bears any sign of damage to any portion of its exterior surface, such as the outer cover or panels. Wear an anti-static wrist strap and work in an electrostatic discharge (ESD) controlled area.

- 1) Inspect the shipping box for any for any obvious damage.
- 2) Unpack the unit from all packaging boxes.
- 3) Inspect the appearance of the unit for any shipping damage.
- 4) Read the user's manual thoroughly and become familiar with all safety symbols and instructions to ensure that the unit is operated and maintained safely.
- 5) Document and inform the shipping company, if any damage is found.
- 6) Keep the shipping boxes and their inserts for future shipment in case the product needs repair.

NOTE: In the event of a reshipment back to the manufacturer, any additional damage caused by not using the original boxes will be considered the responsibility of the customer.

3.2 Operating Environment

EDFAw18 operates at

Temperature: 0°C to +50°C (Recommended)

Humidity: 95% maximum (non-condensing conditions)

It is recommend operating in a dust-free environment

3.3 EDFA Mounting and Power Connection

- 1) Place the unit into a 19-inch wide rack or cabinet.
- 2) Plug the power cord supplied on the rear panel and place the other end of power source, please note the specification of power supply units.

Power Supply Connection	Description
	AC input: 90~132VAC, 50/60 Hz or 176~264VAC, 50/60 Hz
	DC input: 32~72VDC for DC 48V

- 3) Make sure grounding well

3.4 Optical Connections



CAUTION:

ALWAYS MAKE SURE that all power is removed from EDFAw18 before optical connectors are connected

Cleaning for Fiber Patch Cord Connectors

- Remove the fiber connector dust cap and wipe the fiber connector tip with high-quality fiber cleaner or a dry lint-free cloth. Check if there are scratches or debris on connector surface by using a fiber scope.
- If no scratches or debris are found that means the connector is now clean and ready for connection.
- If debris or scratches are found then repeat the fiber patch cord connector cleaning.

Cleaning for Fiber Optic Adapter

- Compressed air may be used to clean fiber optic adapter. Use compressed air with at least the following specifications:
 - Non-residue, inert gas for precision dust removal
 - Ultra-filtered to < 0.2 microns
 - Recommended for optical systems
- Using compressed air as listed above, remove the adapter dust cover and hold the can of compressed air about 6 inches from the connector. After spraying a few short bursts into the adapter the connector is clean and ready for connection.
- If compressed air is not available, the fiber adapter connector can be cleaned by 2.5 mm cotton swap or connector plate may be removed to clean the internal fiber patch cords.

NOTE: Use caution when handling fibers. Do not exceed fiber manufacturers pulling tension or bend radius specifications when removing fiber bulkhead connector plate.

3.5 EDFA Connections

- 1) Clean all fiber patch cords before connecting.
- 2) Make sure the laser key switch on the front panel of the transmitter is in the OFF position.
- 3) Connect a fiber patch cord from the output of the transmitter to the optical power meter, turn key ON position of transmitter laser. Be sure the optical output is in the -10~+10dBm range (**0dBm is recommended**).
- 4) Turn switch key of transmitter to the OFF position and power OFF.
- 5) Connect the fiber patch cord to the amplifier input. Power up that transmitter once the fiber connections to the amplifier input are secure.
- 6) Turn the transmitter laser key switch to the ON position.

NOTE: When input power is out range of -10~ +10dBm, EDFAw18 automatically turns off pump laser to protect itself and installation personnel.



CAUTION:

NEVER disconnect any fiber connections to the EDFA while it is powered.


4.Touchscreen GUI Setting

CAUTION:

- 1) To avoid damaging the touchscreen, do not tap it with anything sharp or apply excessive pressure to it with your fingertips.
- 2) It is recommended to use fingers when you use the touchscreen.


4.1 Verification

4.1.1 Initial Interface: When EDFAw18 is first powered ON, it turns start-up screen to load system for a few seconds in the following.

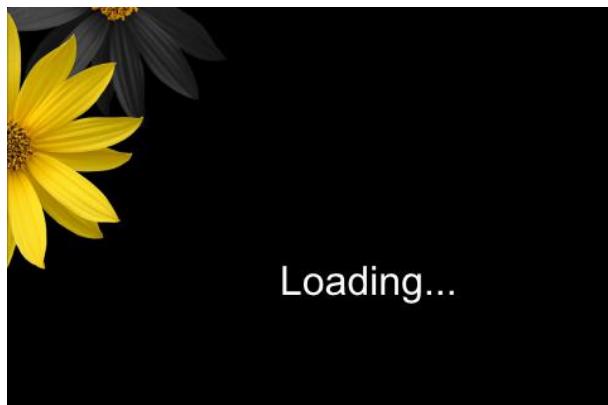

And then it turns to Main Menu and reports the current EDFA status after loading as below.

NOTE: When input power is in the range of -10~ +10dBm, EDFAw18 automatically turns on pump laser.

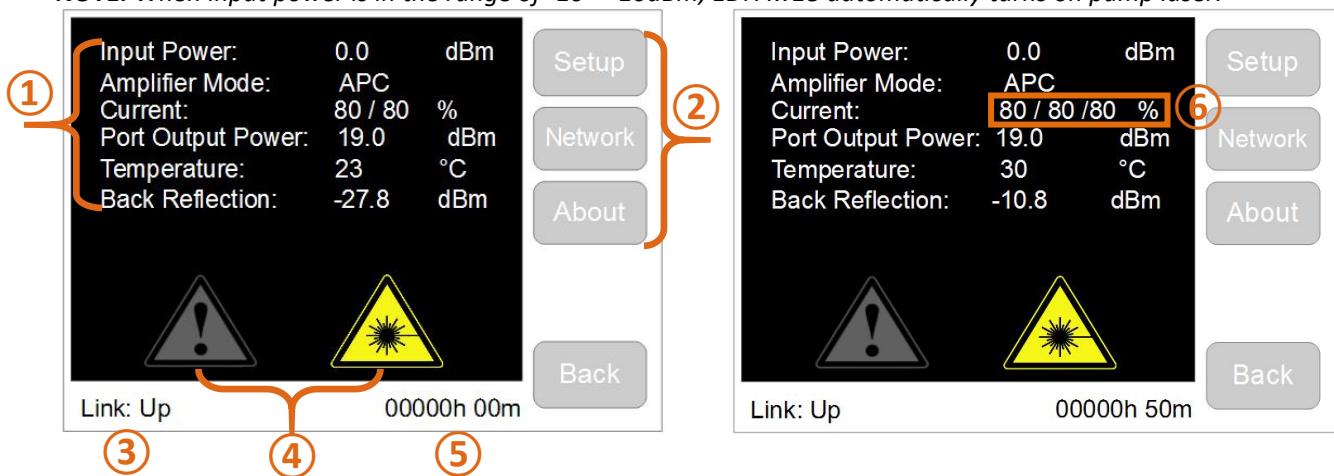


No.	Description
1	Real-time display of details of "Setup", "Network Config" and "About", please see 4.2, 4.3, 4.3
2	"Setup", "Network Config" and "About" which is vertically on the right side of the touchscreen, select any menu by finger tap, please see 4.2, 4.3, 4.4
3	Link Down: RJ45 Ethernet cable is disconnected between EDFA and Computer;
4	Link Up: RJ45 Ethernet cable is well connected between EDFA and Computer
5	Warning signs, see details at 4.1.3
6	System up-time after Power ON
	3 groups current display for power higher than 38dBm


4.1.2 Status Verification

EDFAw18 has built-in power meter to get real value of input power displayed on the touchscreen with the accuracy that is not worse than ± 0.2 dB (-10dBm to +10dBm). Power output sensor calibrates the optical output power of EDFAw18 automatically by MCU. Default factory settings of Amplifier mode is **APC**.

Set 16X19dBm for example as below: after power on, EDFAw18 shows that **Input Power** is 0dBm, **Current** is around 80/80%, **Port Output Power** is 19dBm, Inner temperature is 30°C which means EDFAw18 working fine.

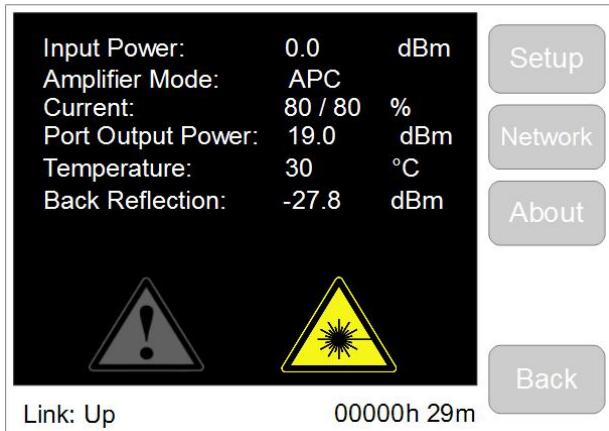

When input power is greater or lower than input power range, when high level of Back Reflection or Overheating arise, EDFAw18 turns off pump current automatically to shut down optical output power.

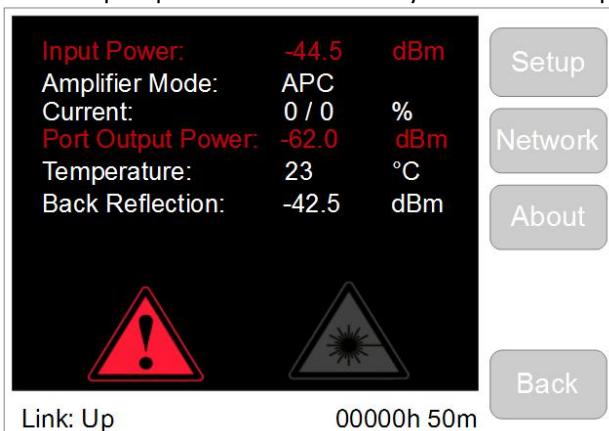


If the output power is significantly different from the built-in power meter measured, it is most likely caused a damage that need to be replaced by the manufacturer.

4.1.3 Warning Signs: Signs are displayed at the bottom of Touchscreen LCD when EDFA is under abnormal status. Set details at **5.7 Thresholds of Alarm and Warning**

Warning	Description	Warning	Description
	The measured data is greater than or lower than the critical value		Optical output power activated! Laser Radiation!
	The measured data approaches the critical value (greater or lower than the warning value)		Optical output power is shut down. No Laser Radiation!
	No warnings		

4.2 Setup Menu

This menu appears when tap "Setup" from the main menu that is designed to select the operation control mode of EDFAw18 and set the values of the relevant parameters. Tap "Back" button to return main menu.

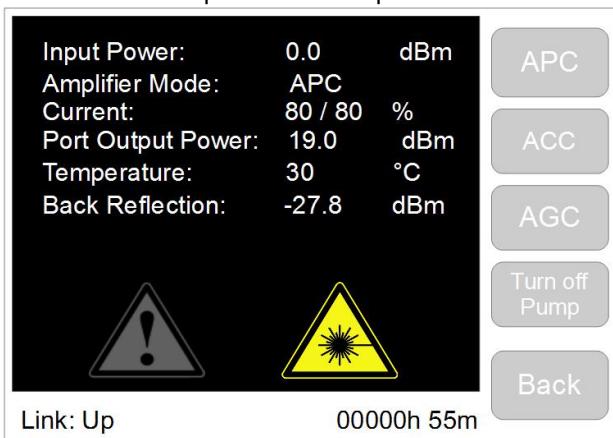

Four modes are (Sub-menu) displayed on touchscreen.

Control Mode	Description	User Level
APC (Automatic Power Control)	Output Optical Power Level Stabilization	Basic User (Recommended)
ACC (Automatic Current Control)	Pump Current Level Stabilization	Only Professional
AGC (Automatic Gain Control)	Optical Gain Level Stabilization	Only Professional
Turn off Pump	Turn Off the Current of Pump Laser	Basic User

Content of control mode is as below

Item	Description	Unit
Input Power	The optical power of the input signal	dBm
Amplifier Mode	The operating control mode : APC,ACC,AGC	
Current	Pump laser current	%
Port Output Power	Optical output power of each output port	dBm
Temperature	Temperature inside of the device	°C
Back Reflection	Back reflection optical power (back direction)	dBm

4.2.1 Enter PIN: The first time to enter APC, ACC or AGC mode after EDFA power up, it shows "Enter PIN" interface in order to avoid false touch and prevent unauthorized users. Input PIN code to save and run.

The default PIN code is "1111", go web management interface to change PIN code.

The default PIN authorization timeout is "5" minutes (User doesn't touch screen over 5 minutes), go web management interface to change PIN authorization timeout.




Keyboard Explanation

Button	Description	Button	Description
Esc	Tap to return to the previous screen menu without saving	←	Clear up one number
Clear	Allows to clear all input field	Save	Saves specified parameter/ value/ mode to apply

4.2.2 APC Mode (Recommended) : Tap “APC” button to enter APC mode. APC mode is system default control mode. APC (Automatic Power Control) is established and maintained by the output power regardless of the changes of the input signal and temperature. EDFAw18 automatically adjusts the current laser diode pumping to ensure stabilization of the desired output power that measured by an internal sensor.

Output power value is appeared at the top of menu as shows its value. Set the desired value by using the touch keyboard to input and then to save, the LCD display as below:

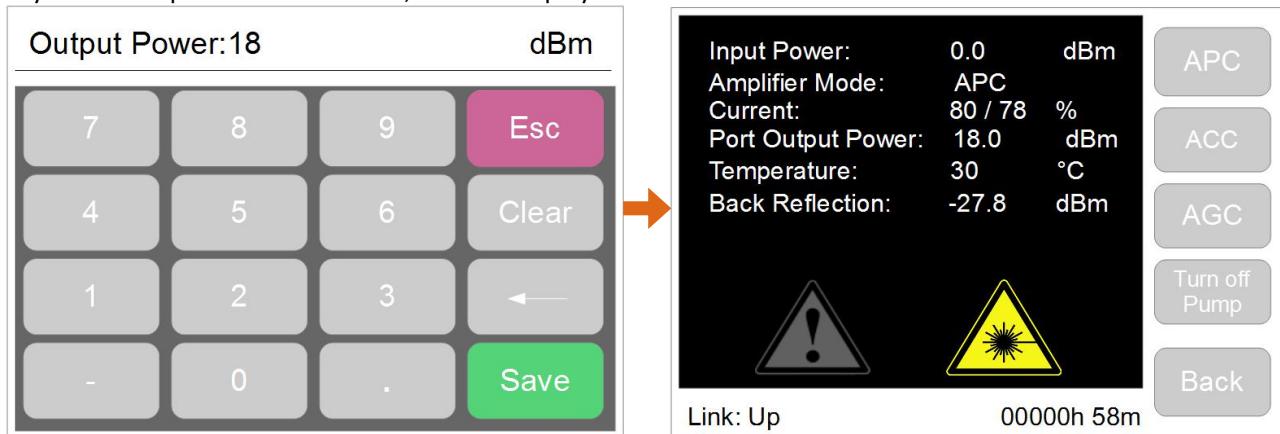

Note1: The desired value of output power can not higher than the value of EDFA maximum Output power, otherwise, this desired value will not be activated.

Note2: The way to turn output power to “0” at APC mode is to input “0” and save it.

4.2.3 ACC Mode: Tap “ACC” button to enter ACC mode

ACC mode (Automatic Current Control) provides the direct power, control the device through the management of current laser diode pumping. Current is set as a percentage of the maximum value. The maximum current is set by the manufacturer. Default Value of ACC mode is 80/80% (Recommended).

Current is appeared at the top of menu as shows its value. Set the desired value using the touch keyboard to input value

4.2.4 AGC Mode: Tap “AGC” button to enter AGC mode

AGC mode (Automatic Gain Control) is established and maintained by the fixed value of the input signal gain regardless of the input signal and temperature. The device automatically adjusts the current laser diode-pumped high-power cascade to maintain required gain, which is based on measurement of internal sensor. Gain is appeared at the top of menu as shows its value. Set the desired value using the touch keyboard to input value.


Note: When input power is 0dBm, the output gain value is same as Port Output Power on touchscreen.

CAUTION: 

NEVER disconnect any fiber connections to the EDFA while it is powered.

4.3 Network Configuration


This menu appears when you click "Network Config" from the main menu touch graphic display and is designed to control and configure the network settings of EDFAw18.

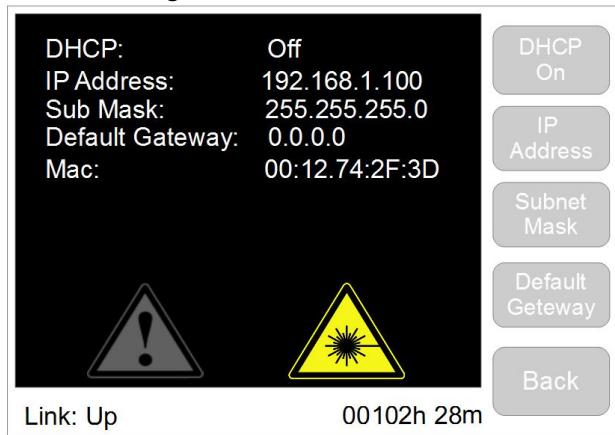

Factory Default Network Configuration is as below. The network configuration can be modified by Web remote management.

Item	Default Value
DHCP	Off
IP Address	192.168.1.100
Subnet Mask	255.255.255.0
Default Gateway	0.0.0.0

4.3.1 DHCP ON/OFF: DHCP is switched on and off by taping DHCP button in this menu.

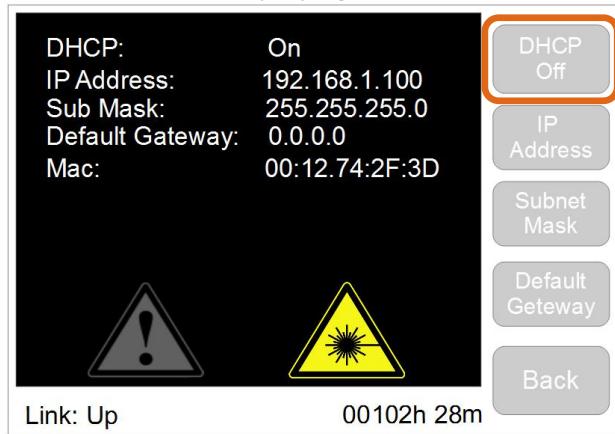

4.3.2 IP Address: Tap “IP Address” to enter into the following interface. IP address is appeared at the top of menu as shows its current value, set the desired value using the touch keyboard to input value.

IP Address:192.168.1.100

7	8	9	Esc
4	5	6	Clear
1	2	3	←
-	0	.	Save

Note1: In accordance with the version of the Internet Protocol version 4 (IPv4), IP address has a length of 4 bytes. In this version of an IP address is a 32-bit signed number, it is convenient form of writing which is written as four decimal numbers from 0 to 255, separated by comma.

4.3.3 Subnet Mask: Tap “Subnet Mask” to enter into the following interface. Subnet mask is appeared at the top of menu as shows its value, set the desired value using the touch keyboard

Subnet Mask:255.255.255.0

7	8	9	Esc
4	5	6	Clear
1	2	3	←
-	0	.	Save

4.3.4 Default Gateway: Set the default gateway address and define the network gateway to which to send traffic for which you cannot determine a route based on routing tables.


Gateway:0.0.0.0

7	8	9	Esc
4	5	6	Clear
1	2	3	←
-	0	.	Save

Default Gateway is appeared at the top of menu as shows its value, set the desired value using the touch keyboard to input value

4.4 About

Tap “About” to enter into the following interface. This menu contains the basic information about the device, and tap “Back” to go main menu.

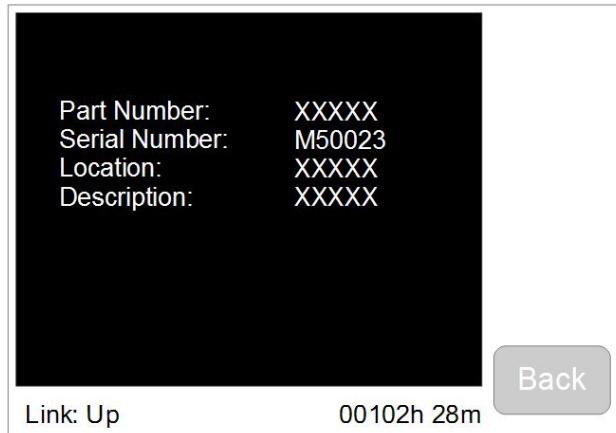

Item	Default Value
Part Number	The identifier of optical amplifier Model No.
Serial Number	The unique and identifying number of this optical amplifier
Location	This optical amplifier's installed place
Description	The description of this installed place


5. Web GUI Setting

EDFAw18 high power EDFA supports to monitor and administrate the working status through a web-interface by different OS and any modern browser (Chrome, Mozilla Firefox, Opera, Internet Explorer, Edge, Safari, etc.)



5.1 Accessing the Web interface


EDFAw18 has an RJ45 interface for connecting remote control by using Cat6 RJ45 cable. When "Link:Down" turns to "Link: Up", RJ45 Ethernet cable is well connected between EDFA and computer. See as below:

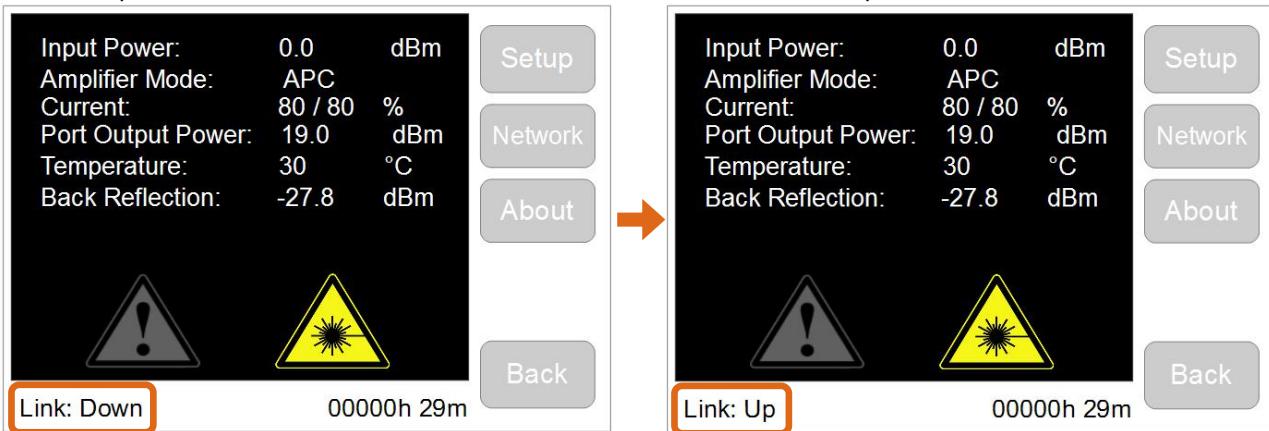

Make sure IP address of computer is 192.168.1.x (x=2~255). Input 192.168.1.1 into web browser to get following interface. User name and password are requested.

Note: the default user name and password is as below:

User Name	Password	Authorization
Admin	PassAdmin	Reading and setting parameters
Read	readonly	Reading parameters Only

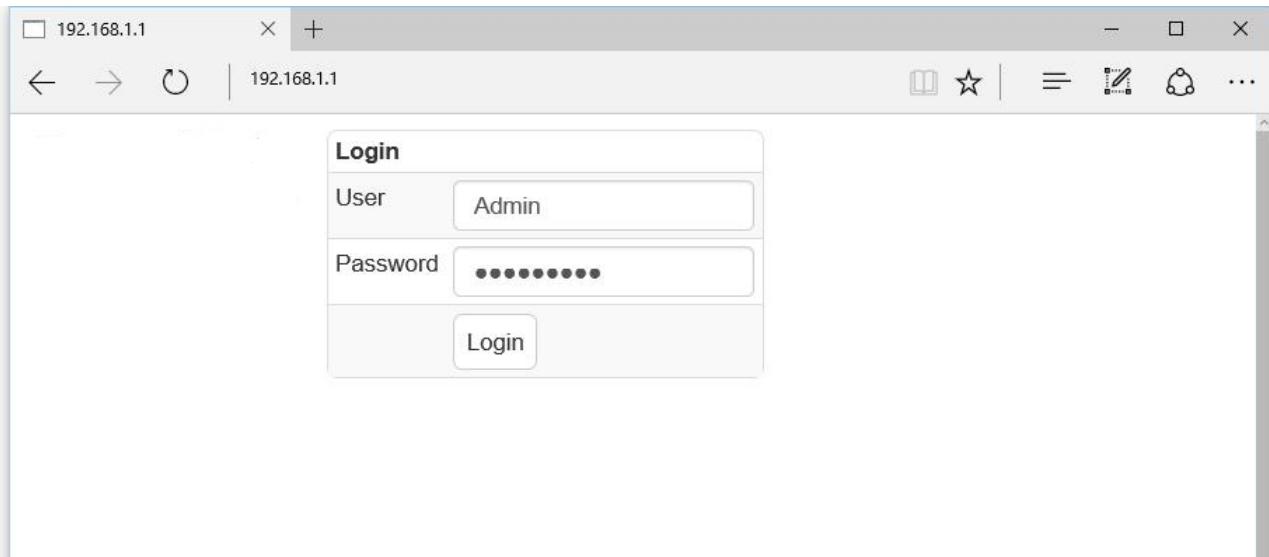

5.2 Management

5.2.1 Amplifier Status

After input correct user name & password, and login, the general page of the web interface is appeared. This home page allows a quick system overview.

Name	Value	Unit
Status	critical	
Input1Power	-20.3	dBm
Input2Power	-23.8	dBm
ActiveInput	input1	
InputPower	-43.8	dBm
Mode	APC	
PumpCurrent	0 / 0	%
PortOutputPower	-59.0	dBm
BackReflection	-42.3	dBm

Name	Value	Unit
Temperature	26	°C
PrePumpTemperature	25.3	°C
PS1	normal	
PS2	no voltage	
UpTime	1606	s

Name	Value
PartNumber	8-21-1U-SA-AA-EU
SerialNumber	3917010097
PortAmount	8

5.2.2 Optical Switch (Option)

Click “Optical Switch” to control optical switch panel.

This optional function is only available for the EDFA equipped with optical switch module inside.

Name	Value	Unit
Input1Power	-20.2	dBm
Input2Power	-23.8	dBm
ActiveInput	input1	
InputPower	-43.8	dBm


Name	Value	Unit
DeltaInputPowerSwitch	1.0	dB

Optical Switch Thresholds for auto_delta mode		
HigherInputPowerSwitch	-2.0	dBm
LowerInputPowerSwitch	-3.0	dBm

There are 5 modes of optical switch function for different networks and requirements


Name	Description
Input1	Force to Input1
Input2	Force to Input2
Auto_delta	Input1 and Input2 have same priority
Auto_input1	Input1 is master, input2 is slave
Auto_input2	Input2 is master, input1 is slave

Auto_delta Block Diagram

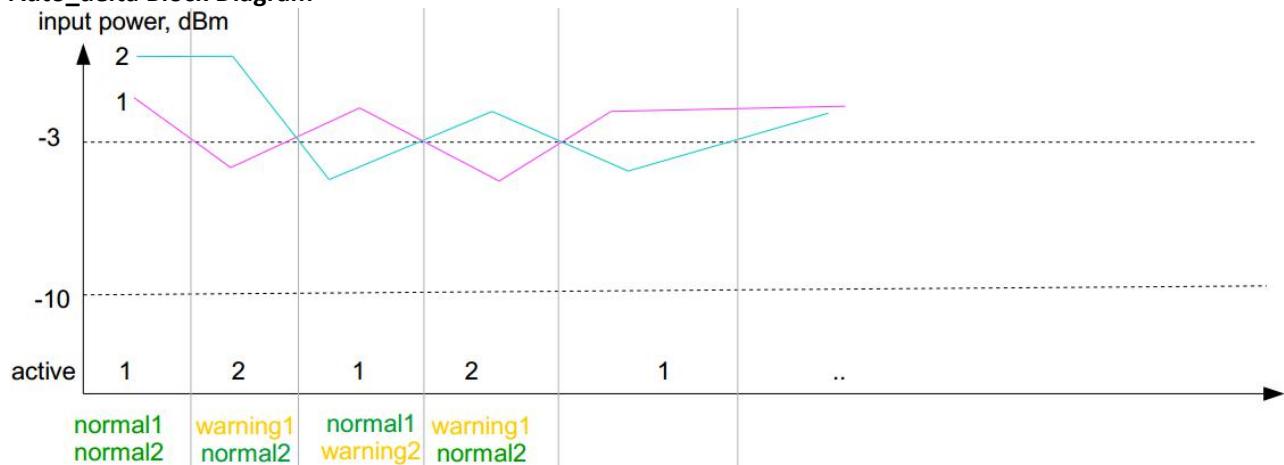

User can set the value of delta input power switch for different demands.


Auto_input1/Auto_input2 Block Diagram

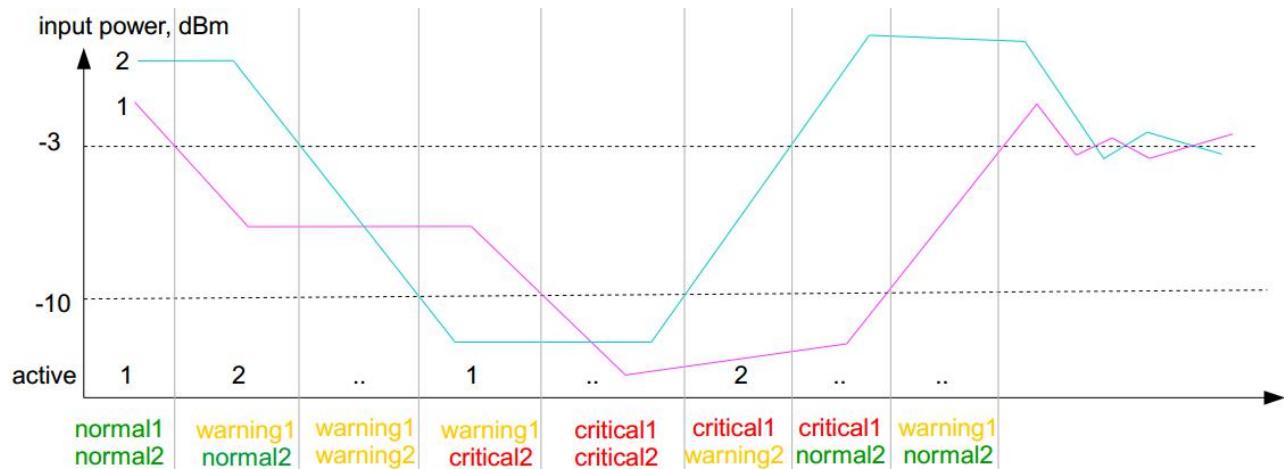

User can set the value of higher input power switch and the lower input power switch.

5.2.3 Amplifier Setup

Click "Amplifier Setup" to control and change the operating control mode of the device by "Save" button. EDFAw18 also can be found in sections by Touchscreen LCD Setting.

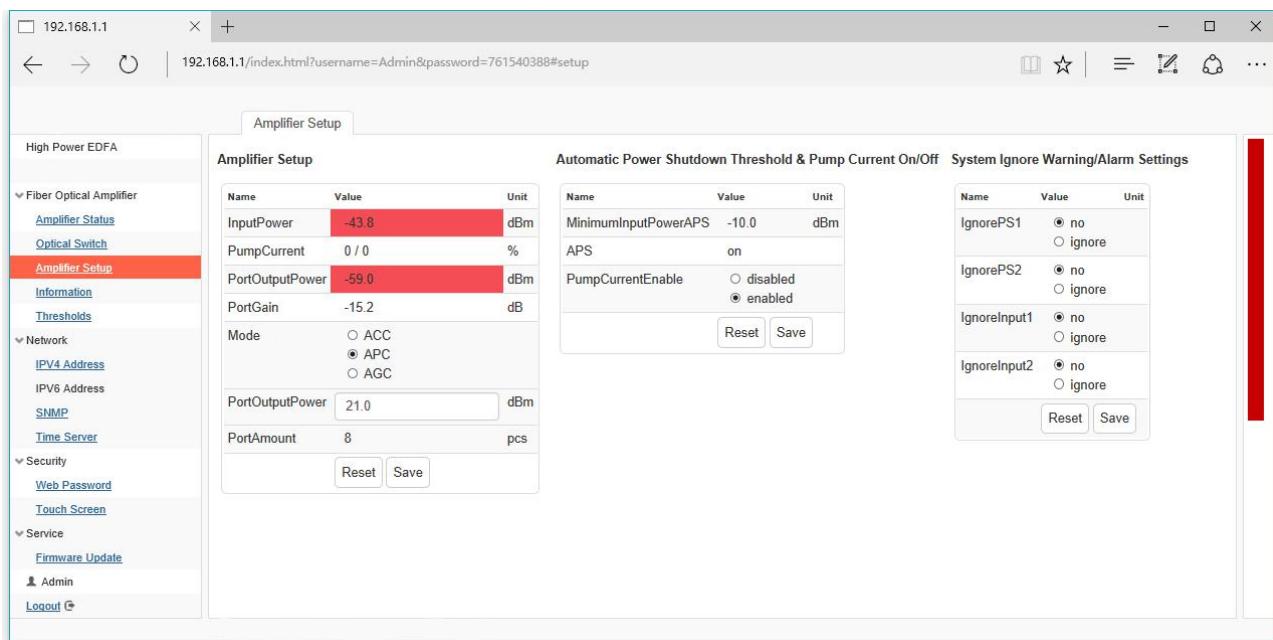

There are 3 kinds of control modes of this amplifier are shown in the table below

Control Mode	Description	User Level
APC (Automatic Power Control)	Output Optical Power Level Stabilization	Basic User (Recommended)
ACC (Automatic Current Control)	Pump Current Level Stabilization	Only Professional
AGC (Automatic Gain Control)	Optical Gain Level Stabilization	Only Professional

Warning Alarm for Power Supply and Input Power

Name	Description
Ignore PS 1	When EDFA is equipped 2pcs power supplies, if only one power supply is connected to power source powered or only one is working, the system gives yellow alarming sign to user. And user can force to turn off alarming sign
Ignore PS 2	
Ignore Input1	When EDFA is equipped 2inputs optical switch module, local network only deployed one input, user can force to turn off the other input to turn off alarm sign.
Ignore Input2	


APC mode(Recommended):

System default mode is APC mode that is easy to operate for basic user. Click "PortOutputPower" to set new output power value.

Please note: The new value is adjustable according to customer's request.


For example, when customer ordered a 16x19 high power EDFA (16 ports with 19dBm per port).

The new value of output power is in 30%~100% range of 19dBm. However, it is not available when new value is higher than 19dBm.

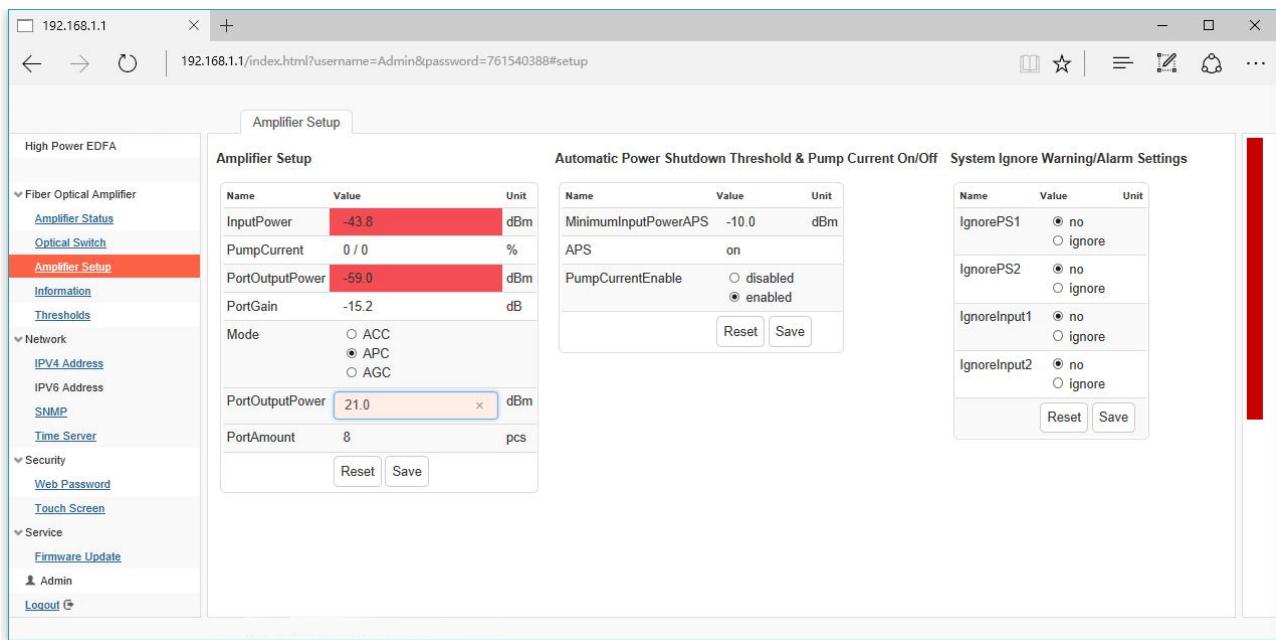


ACC mode:

Click "ACC" to ACC mode to change Pump Current. Default pump current is 80% which is the best optimization for EDFAw18. Click "PumpCurrent" to set new current value. The new value of pump current is from 0% to 80%. It is not available when new value is higher than 80%.

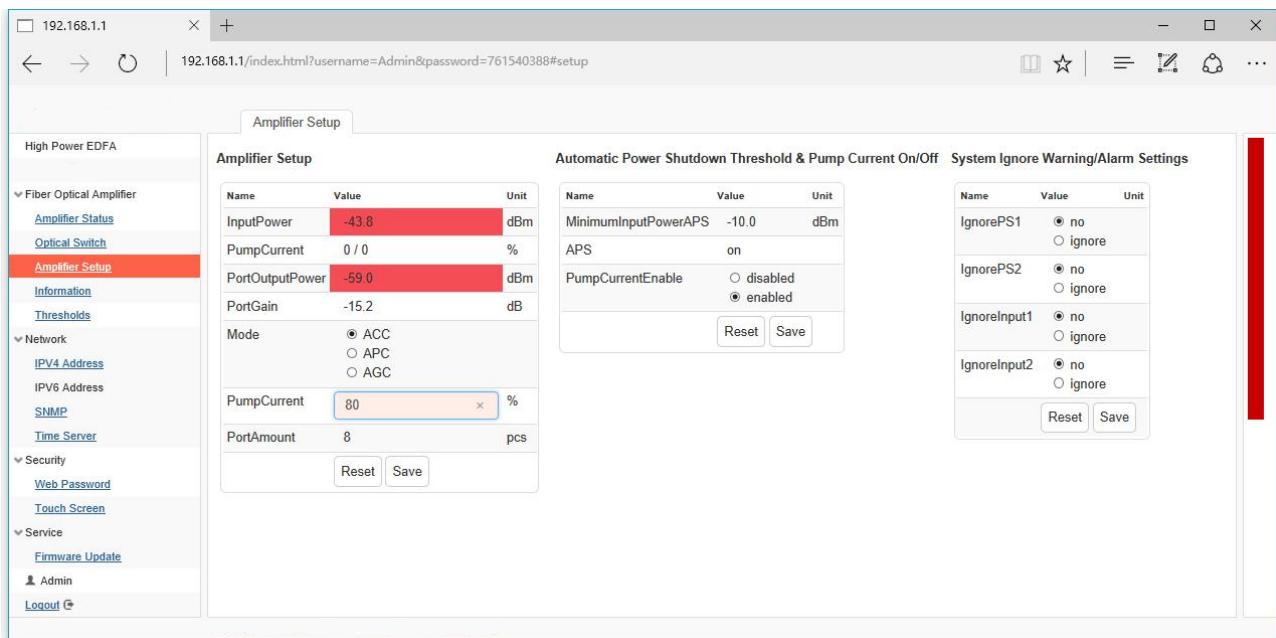

AGC mode:

Click "AGC" to AGC mode to change output gain value for each port.

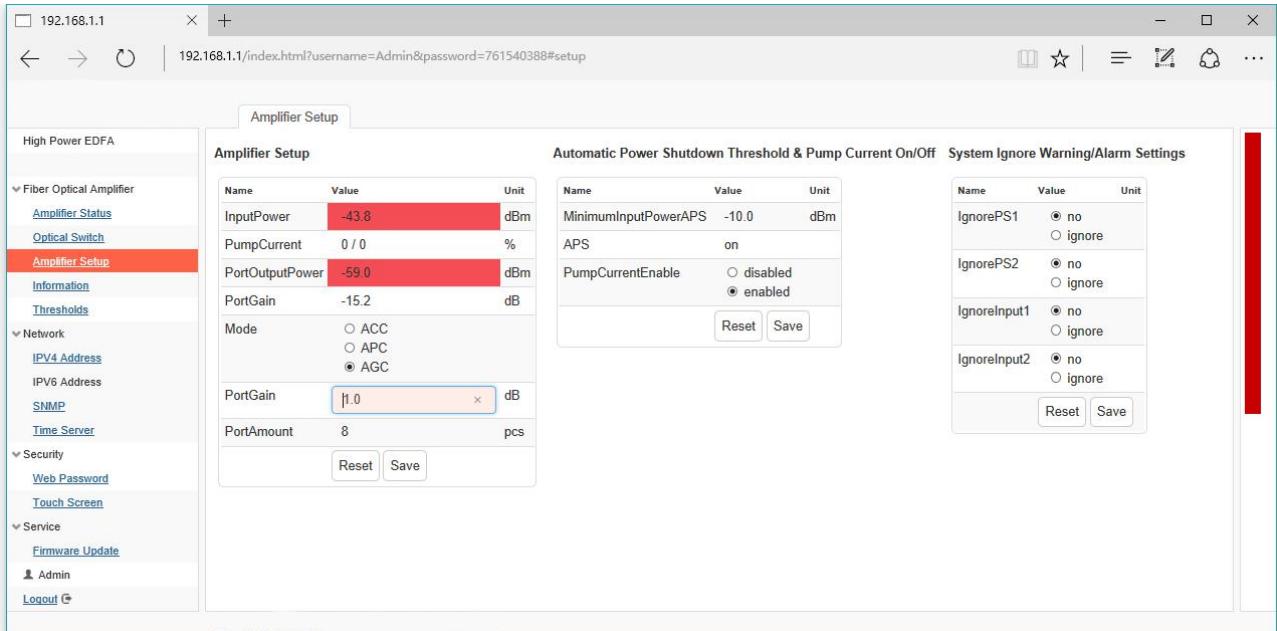

Amplifier Setup

Name	Value	Unit
InputPower	-43.8	dBm
PumpCurrent	0 / 0	%
PortOutputPower	-59.0	dBm
PortGain	-15.2	dB
Mode	<input type="radio"/> ACC <input type="radio"/> APC <input checked="" type="radio"/> AGC	
PortGain	1.0	dB
PortAmount	8	pcs

Automatic Power Shutdown Threshold & Pump Current On/Off


Name	Value	Unit
MinimumInputPowerAPS	-10.0	dBm
APS	on	
PumpCurrentEnable	<input type="radio"/> disabled <input checked="" type="radio"/> enabled	

System Ignore Warning/Alarm Settings

Name	Value	Unit
IgnorePS1	<input checked="" type="radio"/> no <input type="radio"/> ignore	
IgnorePS2	<input checked="" type="radio"/> no <input type="radio"/> ignore	
IgnoreInput1	<input checked="" type="radio"/> no <input type="radio"/> ignore	
IgnoreInput2	<input checked="" type="radio"/> no <input type="radio"/> ignore	

Note: when disabled "PumpCurrentEnable", all pump lasers are shut down immediately.

5.2.4 Information: Click "Information" to see device information that indicates part number, serial number, system location, SNMP, hardware and firmware details.

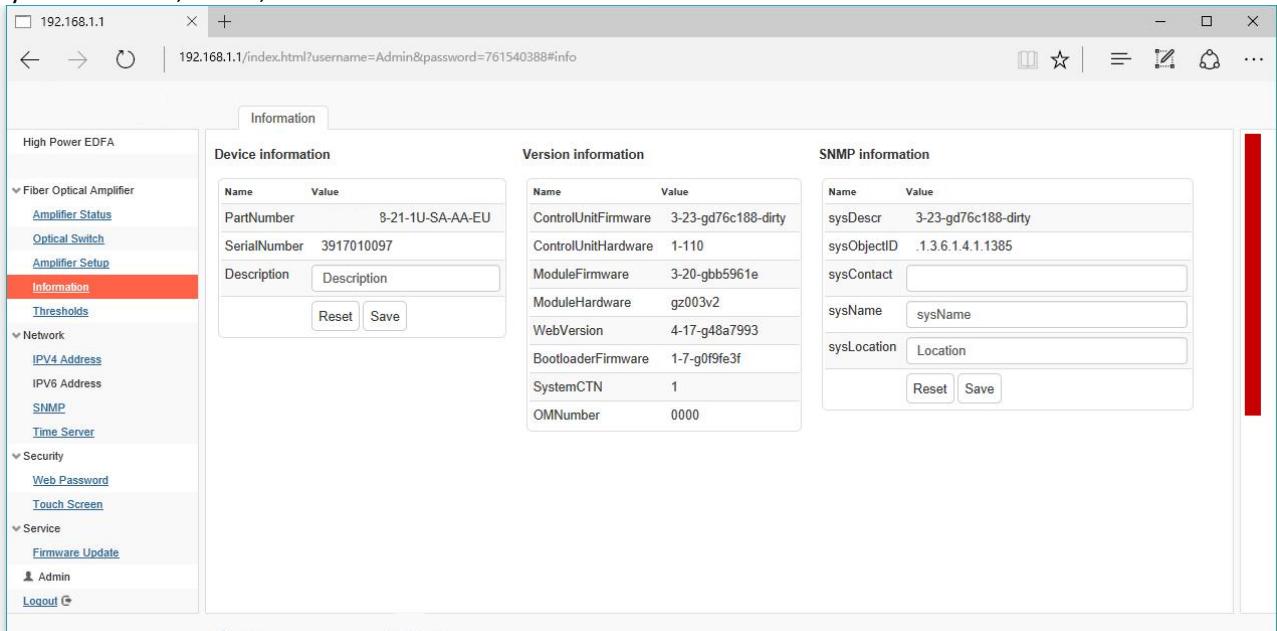

Information

Name	Value
PartNumber	8-21-1U-SA-AA-EU
SerialNumber	3917010097
Description	Description

Name	Value
ControlUnitFirmware	3-23-gd76c188-dirty
ControlUnitHardware	1-110
ModuleFirmware	3-20-gbb5961e
ModuleHardware	gz003v2
WebVersion	4-17-g48a7993
BootloaderFirmware	1-7-g0ff9fc3f
SystemCTN	1
OMNNumber	0000

Name	Value
sysDescr	3-23-gd76c188-dirty
sysObjectID	1.3.6.1.4.1.1385
sysContact	
sysName	sysName
sysLocation	Location

5.2.5 Thresholds: Click "Thresholds" to control and change the device thresholds by "Save" button. "Threshold" supports customized parameters to monitor working status of this EDFA under different networks and gives alarm on both LCD and Web GUI.

Name	Minimal Critical	Minimum Warning	Maximum Warning	Maximum Critical	Unit
TemperatureCMax	5	10	60	65	°C
InputPowerCMax	-10.0	-6.0	9.0	10.0	dBm
PortOutputPowerCMax	9.0	10.0	22.5	22.7	dBm
PortGainCMax	10.0	12.0	30.0	40.0	dB
BackReflectionCMax	-50.0	-40.0	-3.0	0.0	dBm

Input Power Setting: Input the thresholds value as below

Name	Description	Value
InputPower CMax	Maximum Limit (Failure) of Input Power (CMax), dBm	10
InputPower WMax	Upper Threshold (Degrade) of allowable values of Input Power (WMax), dBm	9
InputPower WMin	Lower Threshold (Degrade) of allowable values of Input Power (WMin), dBm	-6
InputPower CMin	Automatic Pump Shutdown (APS) and Minimum Limit (Failure) of Input Power (CMin), dBm	-10

When input power is higher than 10dBm or lower than -10dBm, which means is out of its maximum limit of input power. In order to avoid failure and damage, system starts self-protection application to shut down pump laser current and closes optical output power. Touchscreen displays as **Figure 1**.

Note: The value of "InputPower CMax" and "InputPower CMin" is factory default value that can not be changed.

When input power is between 9~10dBm or -10~-6 dBm that is upper than threshold of allowable values of temperature, but is lower than failure value, system provides alarm and warning signs as **Figure 2**.

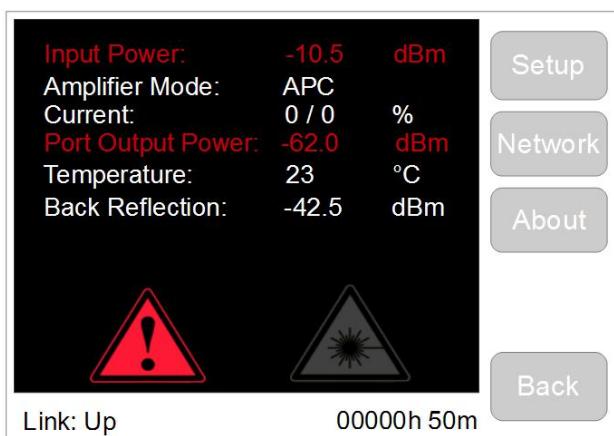


Figure 1

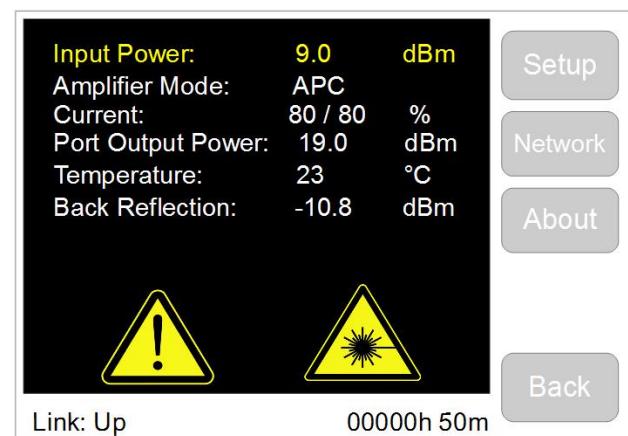


Figure 2

When input power is in the range of -6 ~ 9 dBm, such as “8.5” EDFA is in normal working condition as **Figure 3**. User can set thresholds value of input power according local environment and customer request. For example, set “InputPower WMax” value into “8”, when input power is “8.5”, system gives alarm and warning signs as **Figure 4**.

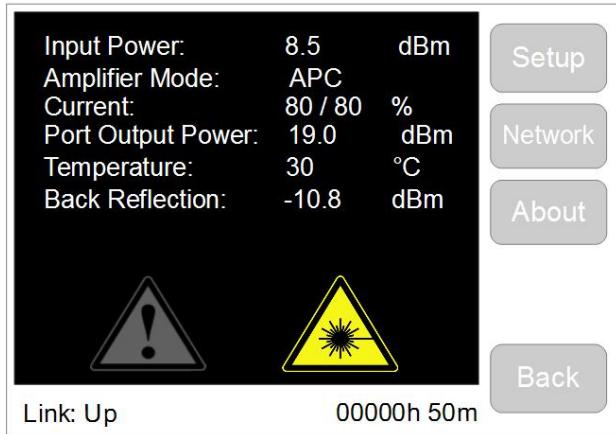


Figure 3

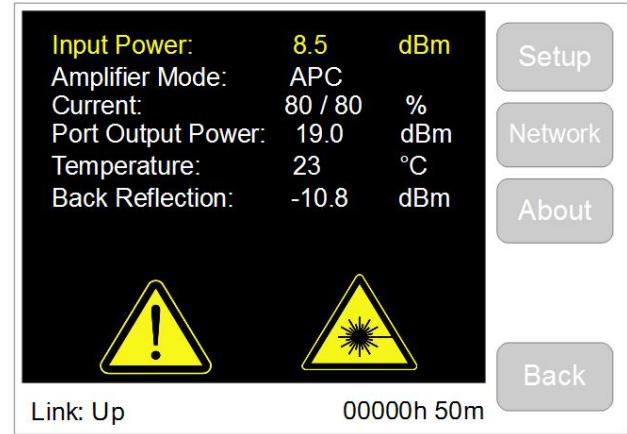



Figure 4

It is the same setting between Port Output power & Back Reflection and Input Power.

5.3 Network


5.3.1 IPv4 Address:

Click to control and change the network status of the device by “Save” button.

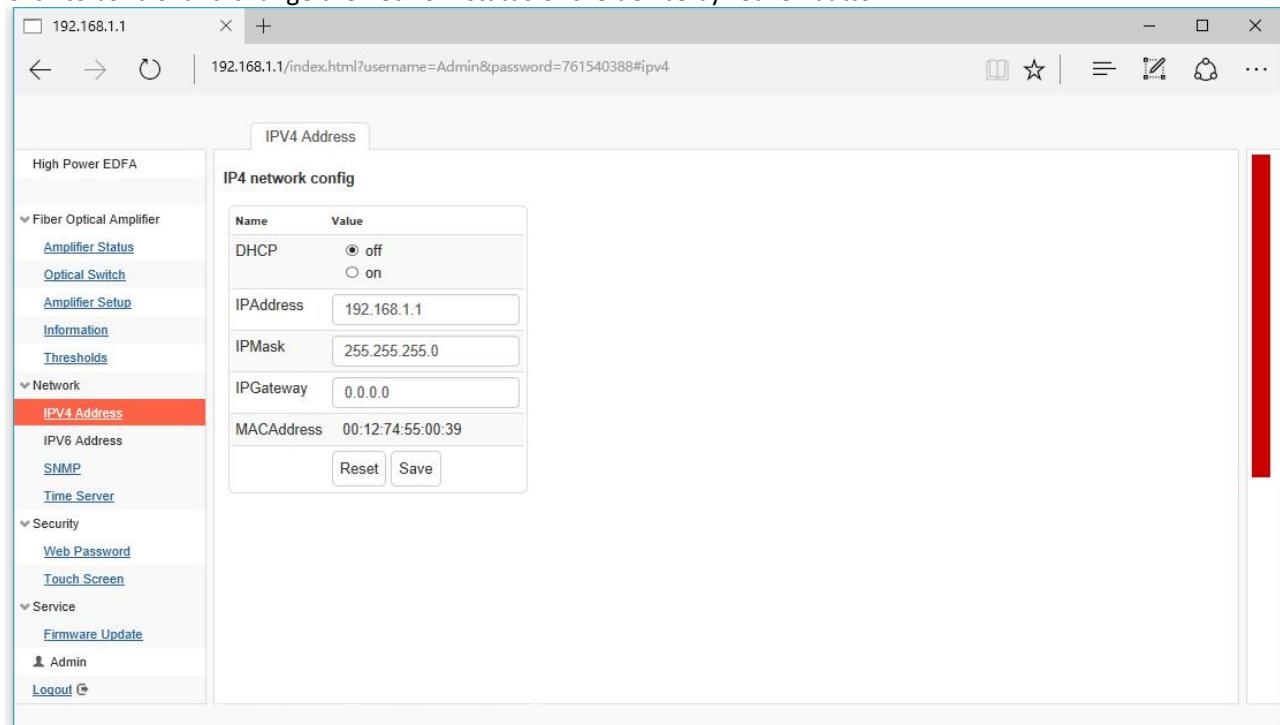


5.3.2 SNMP:

Click “SNMP” to control and change the network status of the device by “Save” button.

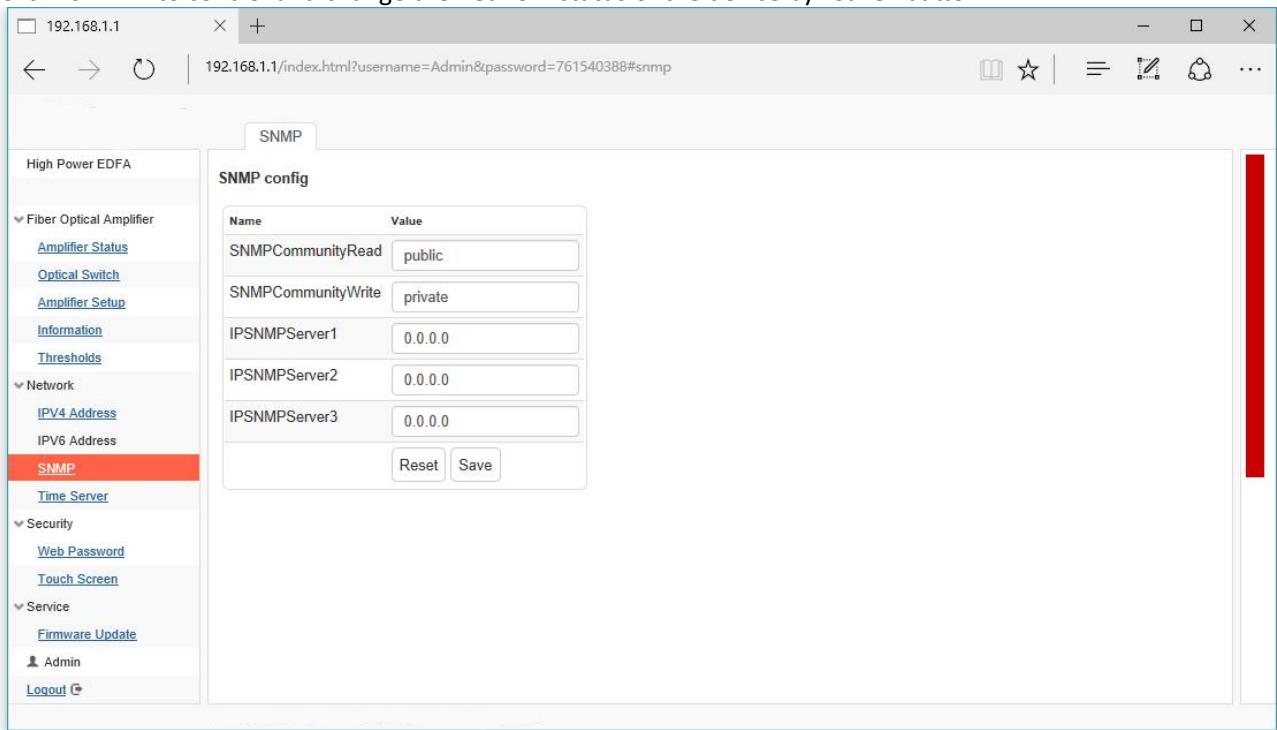

5.3.3 Time Server:


Click “time server” to control and change the network status of the device by “Save” button.

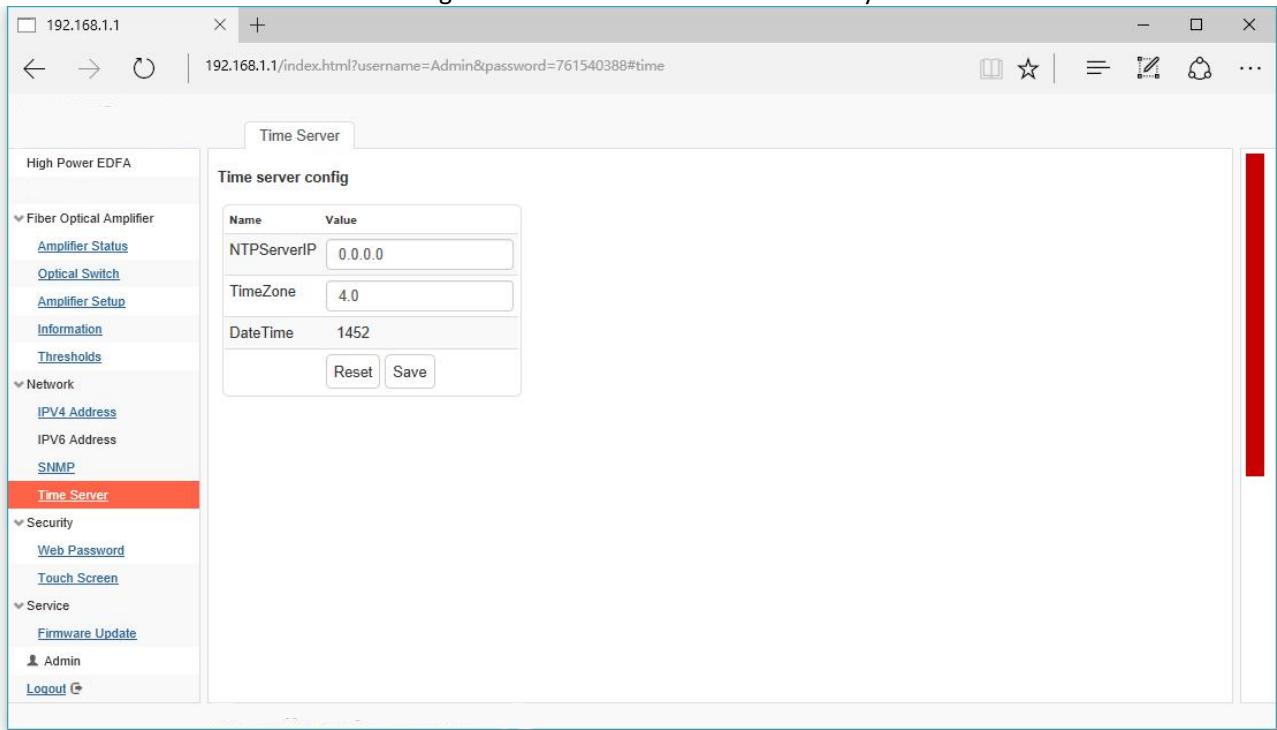

5.4 Security


5.4.1 Web Password:

Click “Web Password” to control and change the password of the device by “Save” button.

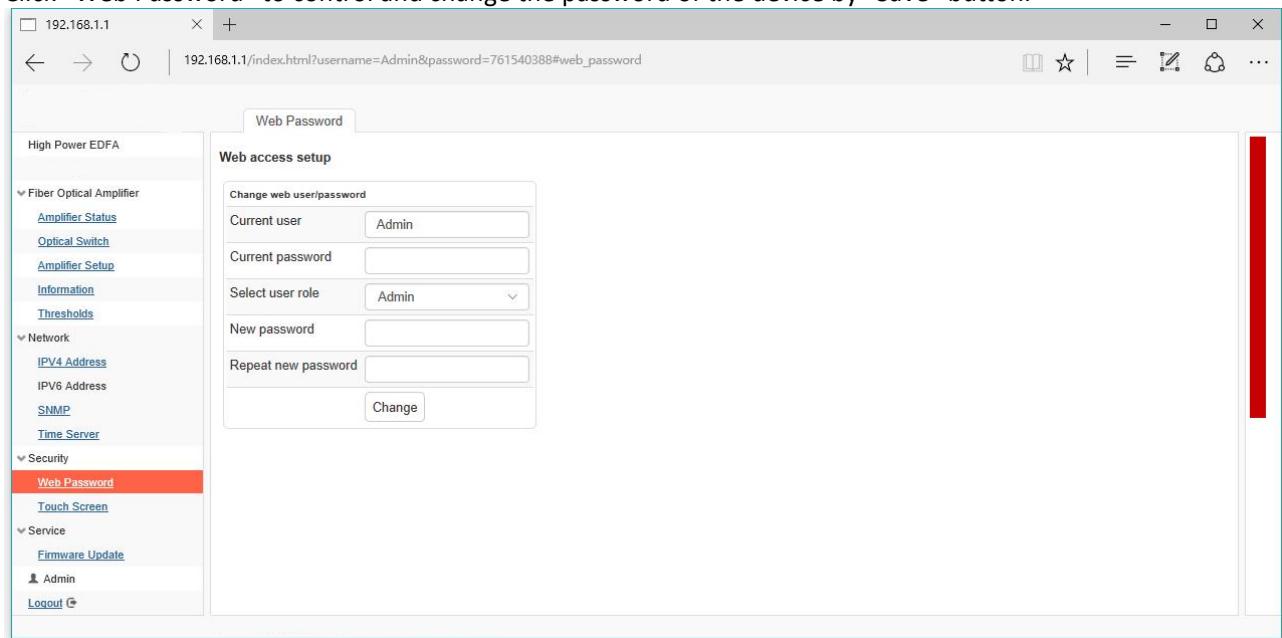


5.4.2 Touch Screen:

Click “Touch Screen” to change LCD display Backlight parameters and PIN code for touch LCD screen of the device by “Save” button.

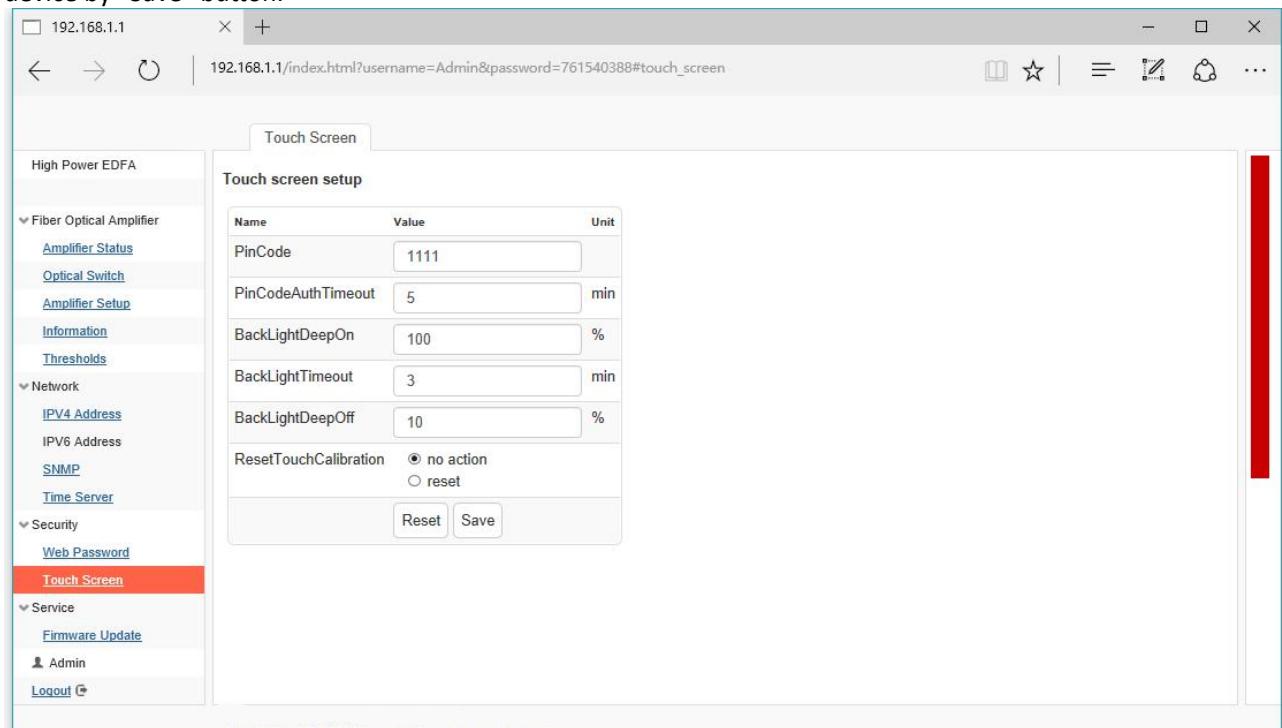


PIN Code Setting: Input new PIN code and click “apply”, then Power OFF of EDFA18w and Power ON, new PIN code is activated.

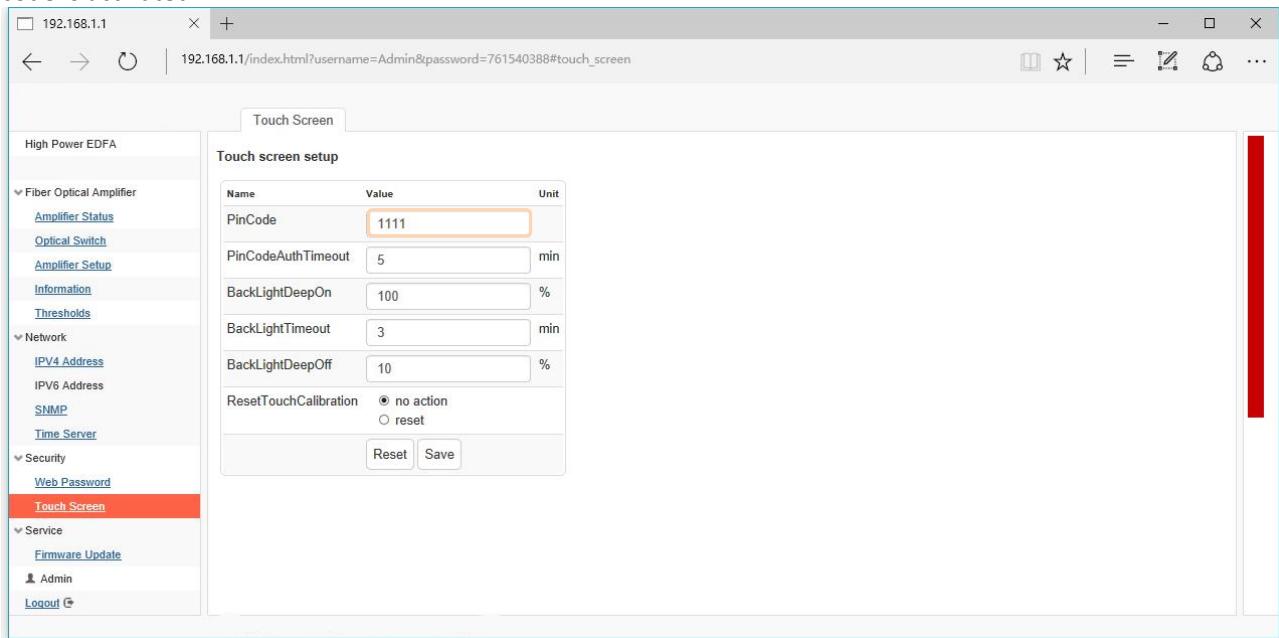


5.5 Service

5.5.1 Firmware Update

Click “firmware update” to upgrade device by “Start Bootloader” button.

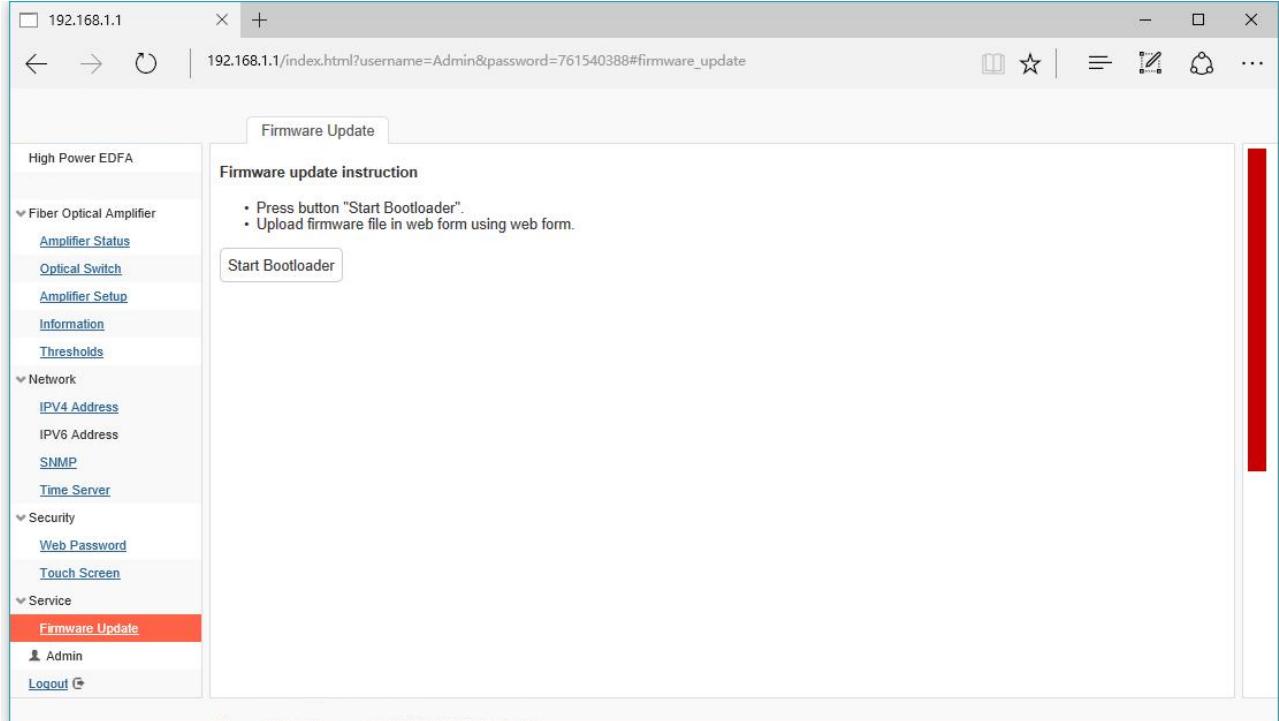


Web browser goes to the interface as below, click “Browse” to find firmware and then click button “Upload Firmware”. After finished uploading, click “Go Application” button and then restart the device.

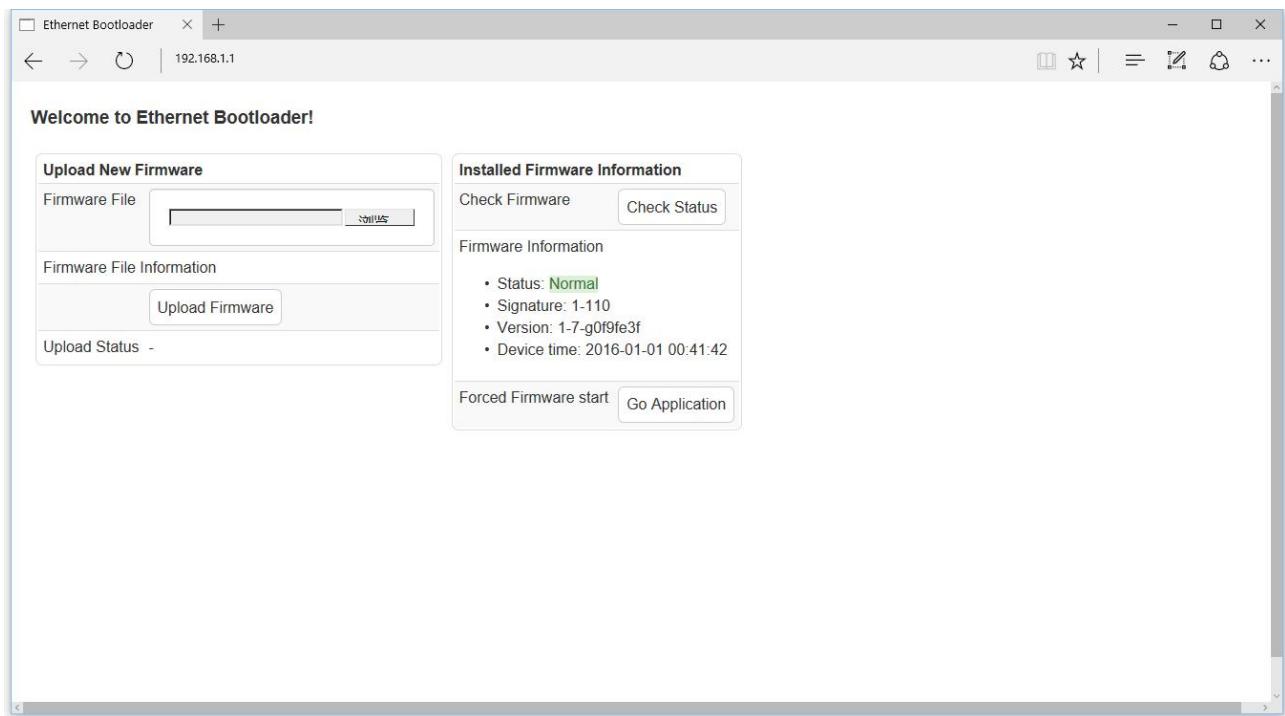

After upload firmware and restart, EDFA touchscreen LCD goes to calibration mode.


LCD Calibration Mode: Use a pen to point touch screen and follows its steps. Touch the center point of cross according to LCD displayed.

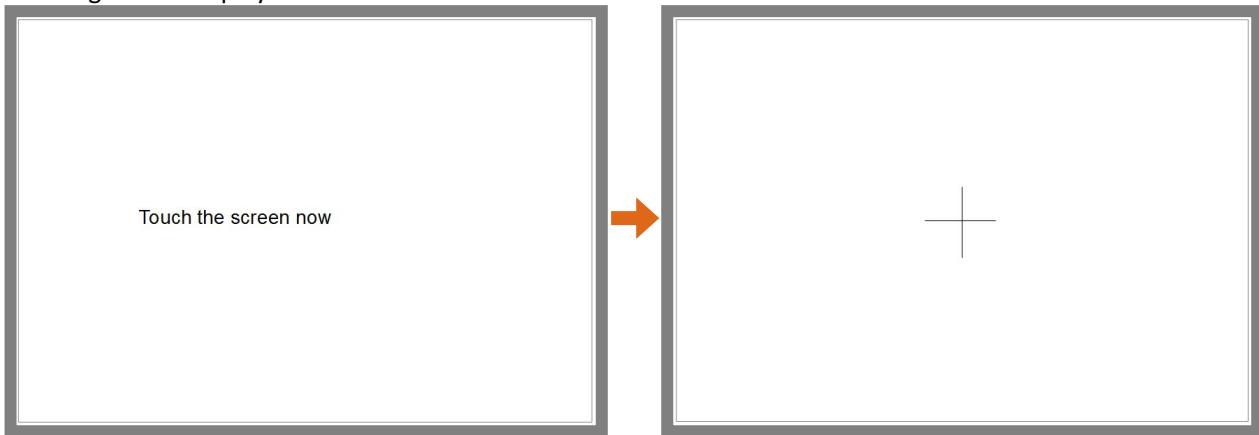


After calibrated, LCD display goes to in the Initial interface, tap "Setup", LCD display restart and run to working status.

6. SNMP Management


PL2000H offers MIB document for different network requirement. Download a MIB browser to configure network information.

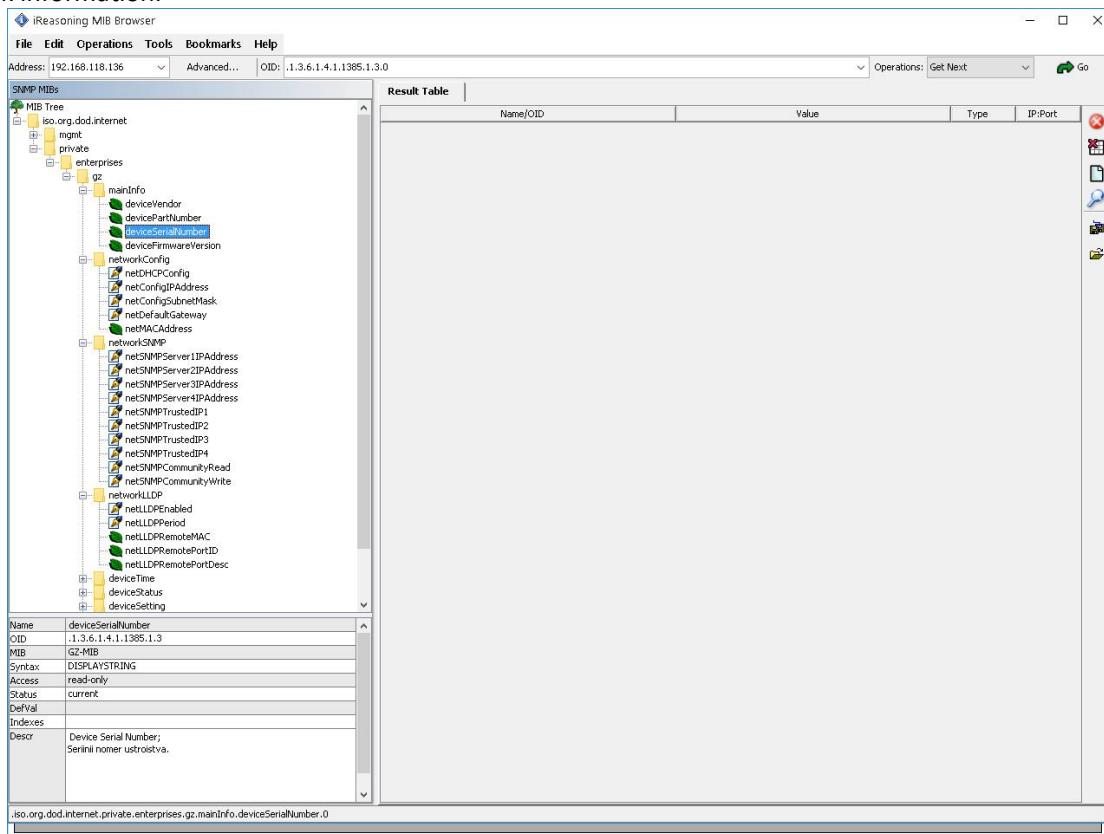

The screenshot shows the iReasoning MIB Browser interface. The left pane displays the MIB tree for the GZ-MIB, specifically the `deviceSerialNumber` object under the `mainInfo` subtree. The right pane shows the `Result Table` with a single row for the `deviceSerialNumber` object, which has an OID of `.1.3.6.1.4.1.1385.1.3.0` and a value of `1.3.6.1.4.1.1385.1.3.0`. The table includes columns for Name/OID, Value, Type, and IP:Port. The bottom status bar shows the full path: `.iso.org.dod.internet.private.enterprises.gz.mainInfo.deviceSerialNumber.0`.

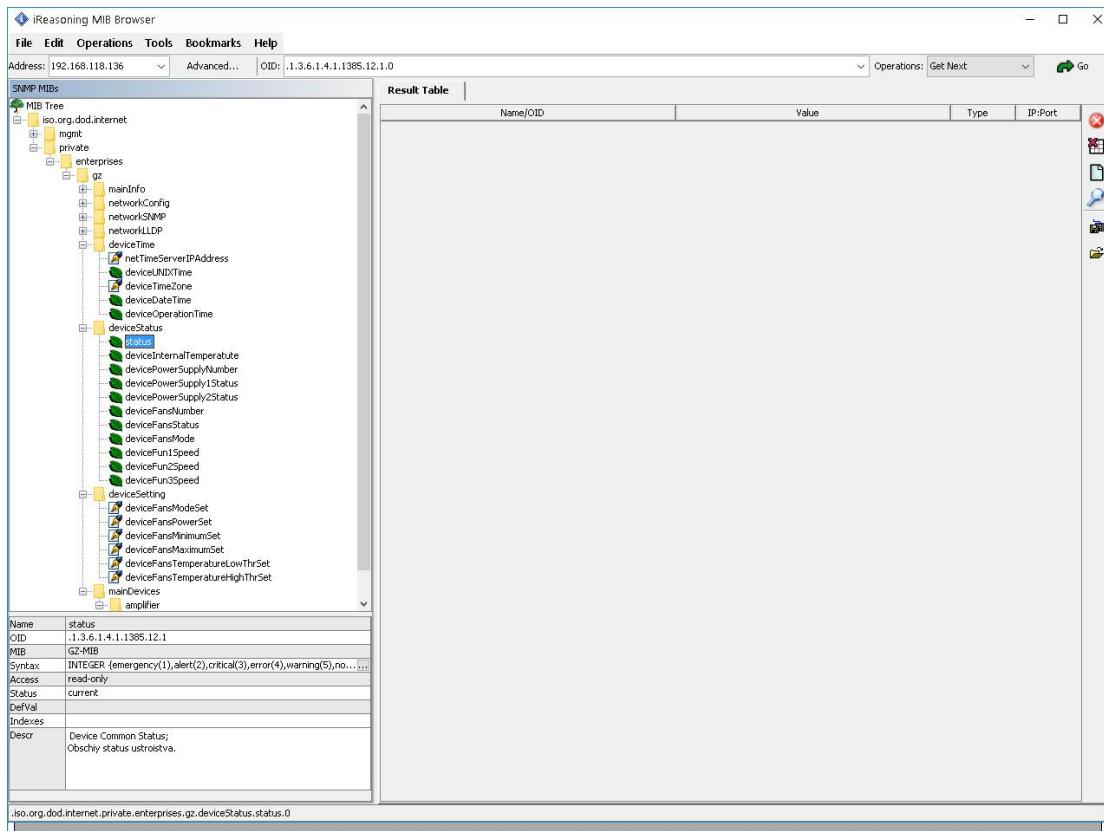

The screenshot shows the iReasoning MIB Browser interface. The left pane displays the MIB tree for the GZ-MIB, specifically the `deviceStatus` object under the `deviceTime` subtree. The right pane shows the `Result Table` with a single row for the `deviceStatus` object, which has an OID of `.1.3.6.1.4.1.1385.12.1.0` and a value of `1.3.6.1.4.1.1385.12.1.0`. The bottom status bar shows the full path: `.iso.org.dod.internet.private.enterprises.gz.deviceStatus.status.0`.

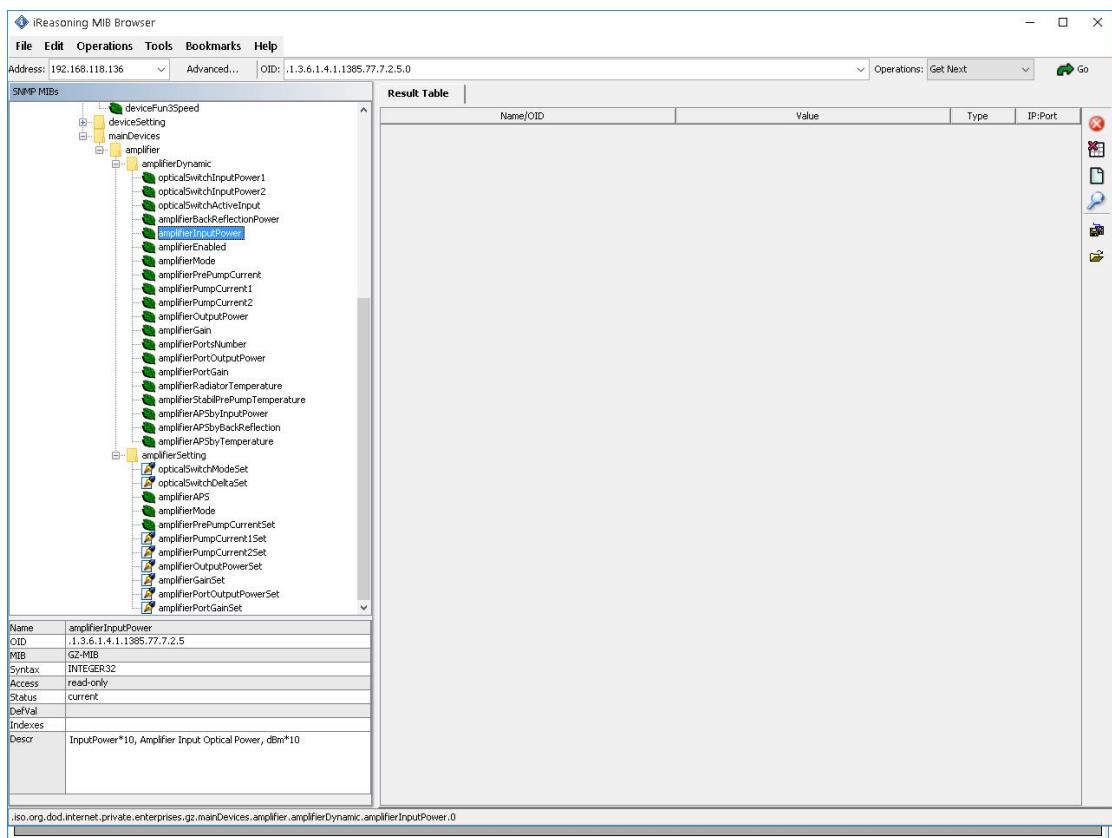

Contact Us

Camyno GmbH,

Aue 144, 6405 Pfaffenhofen

Dr. Franz-Werner-Strasse 30/B1

Tel: +43 5262 21499

E-mail: office@camyno.com

Website: www.camyno.com